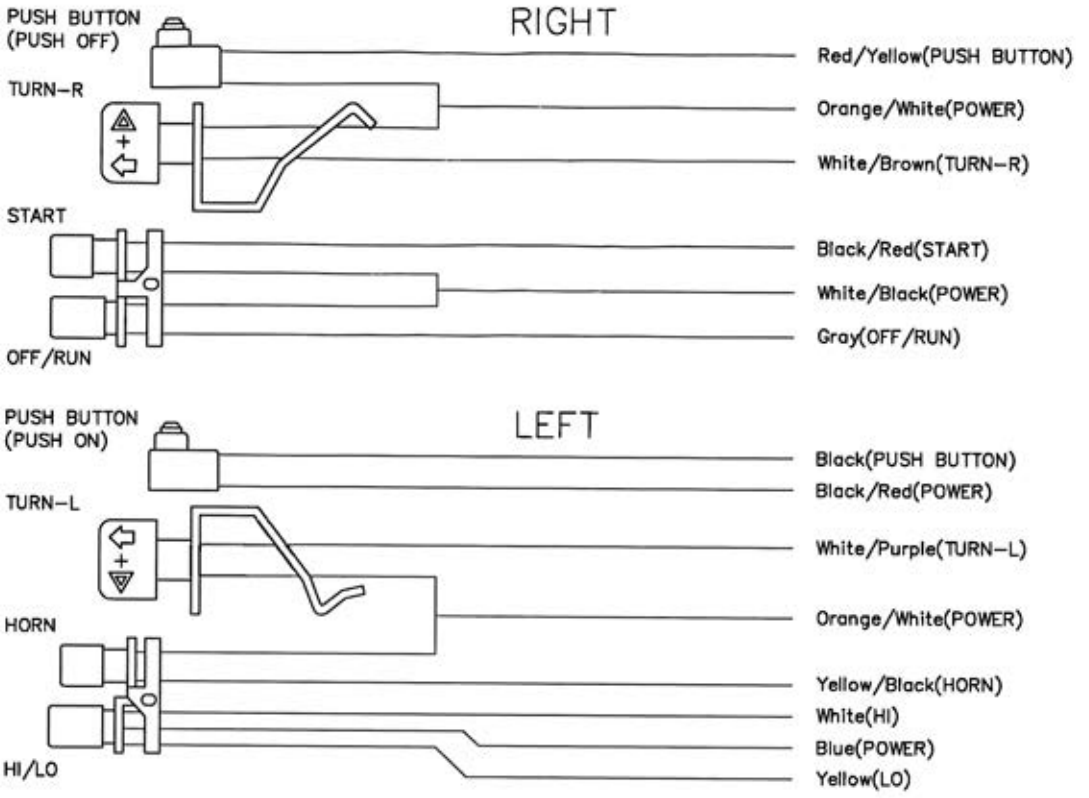

RIGHT
PUSH BUTTON
(PUSH OFF)
TURN–R
START
OFF/RUN
Red/Yellow(PUSH BUTTON)
Orange/White(POWER)
White/Brown(TURN–R)
Black/Red(START)
White/Black(POWER)
Gray(OFF/RUN)
LEFT
PUSH BUTTON
(PUSH ON)
TURN–L
HORN
HI/LO
Black(PUSH BUTTON)
Black/Red(POWER)
White/Purple(TURN–L)
Orange/White(POWER)
Yellow/Black(HORN)
White(HI)
Blue(POWER)
Yellow(LO)