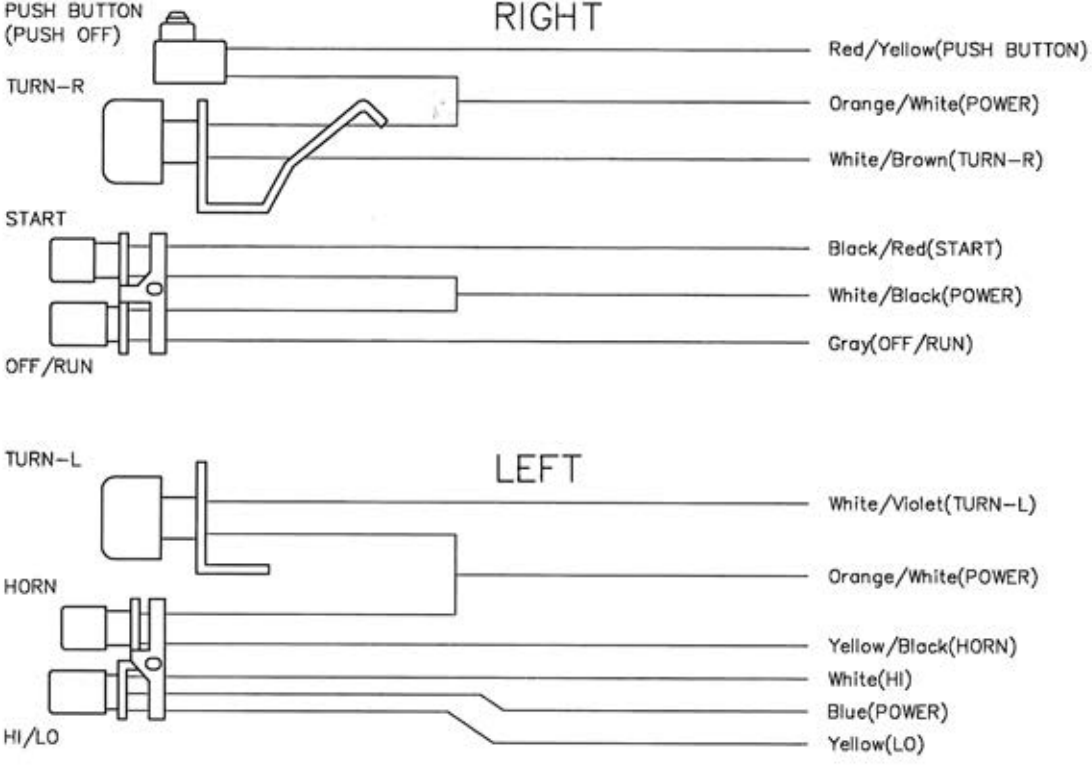

PUSH BUTTON
(PUSH OFF)
RIGHT
TURN-R
Red/Yellow(PUSH BUTTON)
Orange/White(POWER)
White/Brown(TURN-R)
START
Black/Red(START)
White/Black(POWER)
Gray(OFF/RUN)
OFF/RUN
TURN-L
LEFT
White/Violet(TURN-L)
Orange/White(POWER)
HORN
Yellow/Black(HORN)
White(HI)
Blue(POWER)
Yellow(LO)
HI/LO