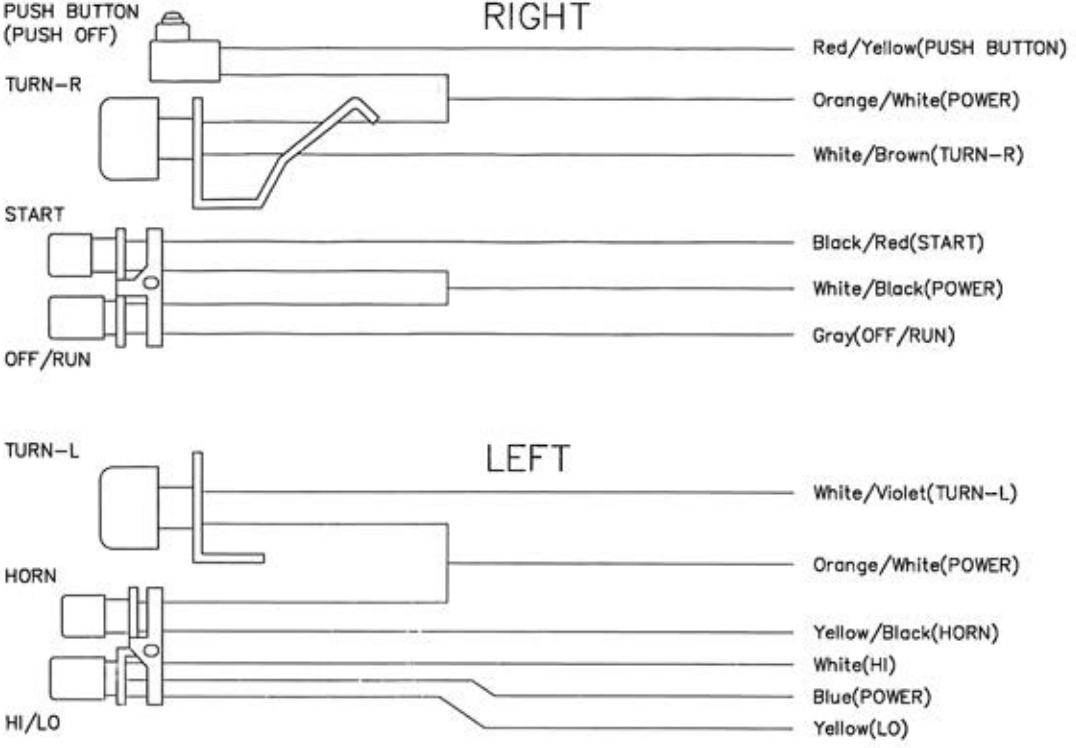

RIGHT
PUSH BUTTON
(PUSH OFF)
TURN-R
START
OFF/RUN
Red/Yellow(PUSH BUTTON)
Orange/White(POWER)
White/Brown(TURN-R)
Black/Red(START)
White/Black(POWER)
Gray(OFF/RUN)
LEFT
TURN-L
HORN
HI/LO
White/Violet(TURN-L)
Orange/White(POWER)
Yellow/Black(HORN)
White(HI)
Blue(POWER)
Yellow(LO)