

“WIDE ASS” SWINGARM KIT ON 2006 TO PRESENT DYNA MODELS

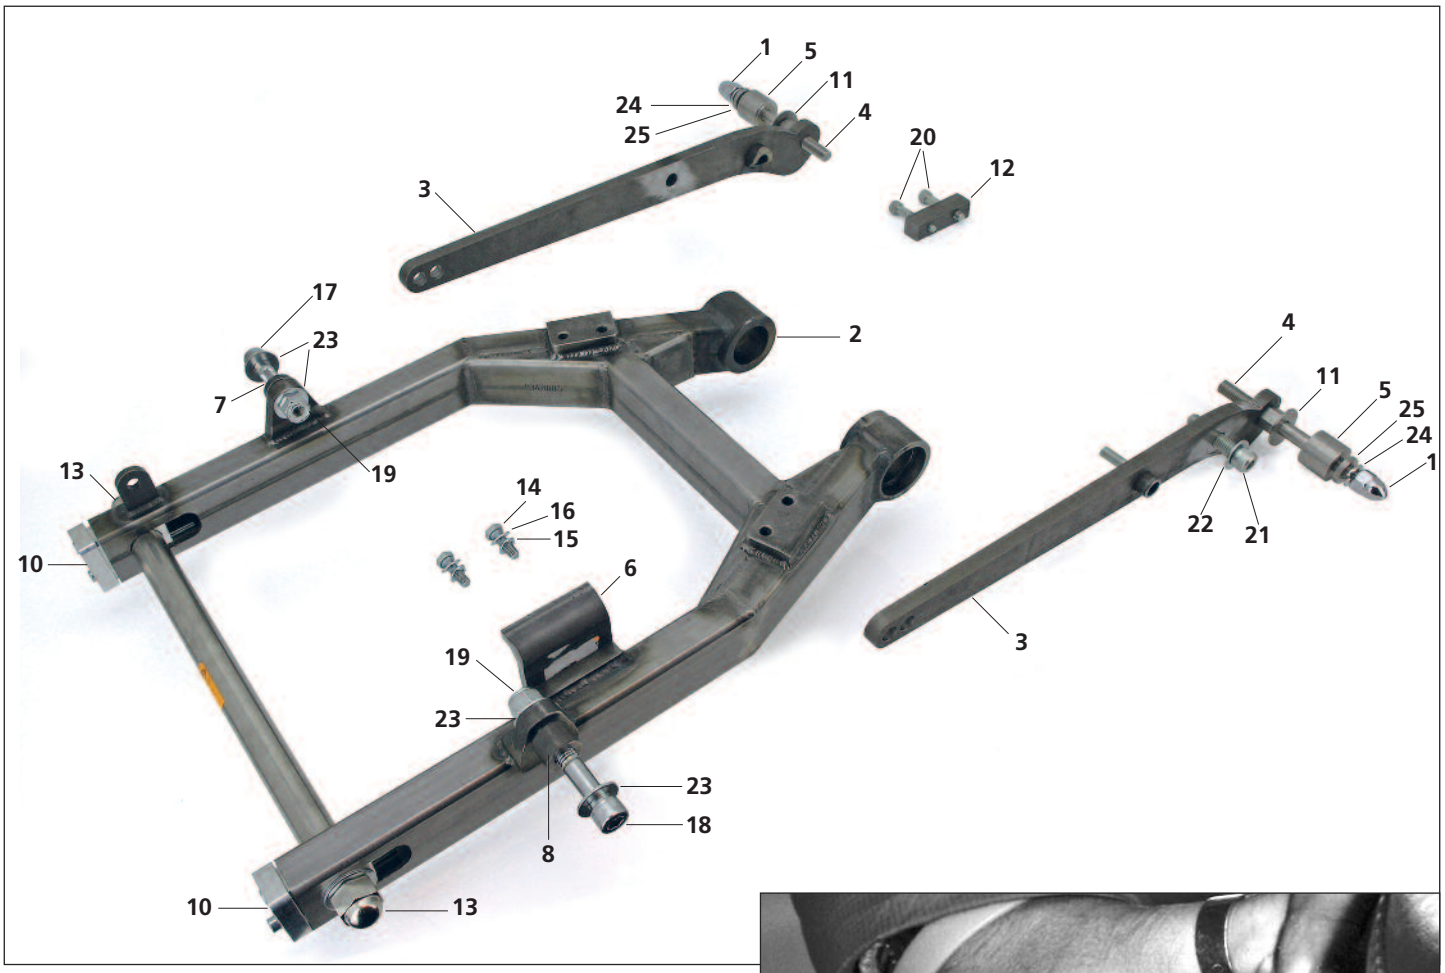

Installation of this wide ass swing arm kit must be done by a qualified mechanic. Please follow instructions for removal of seat, fender, wheel, swingarm etc. as given in the OEM workshop manual.

Place the new fender struts supplied with the kit over the stock fender struts on the bike. Use the provided extended shock mount studs to secure the fender struts on the bike. A long piece of 5/16” rod or two long bolts can be used through the rear fender holes to line the new struts up with the old ones. The hole near the shock mount is used to secure the new struts to the bike. Drill and tap to 1/2” UNC. Cut the stock fender struts approx. 3/8” after the second mounting point with a cutting disc.

The stock fender strut covers can be used. Please note that the shock spacers #5 have a **recess*** that must be fitted facing towards the fender strut cover.

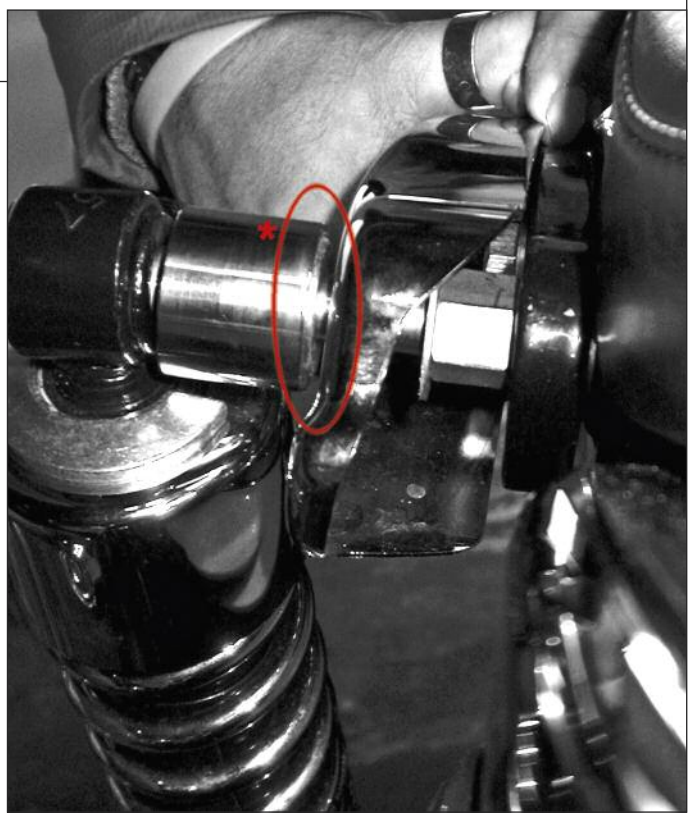

Pos.	Kit 730502 raw Part no	Kit 730504 black	Description	Qty.
A	-	-	Drill and tap to 1/2-13 UNC	-
B	-	-	OEM fender strut covers	-
1	345201	345201	1/2-20 Acorn nut, upper shock mount	2
2	730505	730515	Wide Ass Swingarm	1
3	730506	730516	Wide Ass fenderstruts, set left & right	1
4	730507	730507	Shock stud set left & right	1
5	730508	730508	Shock mount spacers, pair, stainless steel	1
6	730509	730519	Brake anchor	1
7	730510	730510	Left lower shock spacer, 25x13x6,5	1
8	730511	730511	Right lower shock spacer, 25x13x17,5	1
9	730512	730512	Wheel axle 25mm w/nuts	1
10	730513	730513	Belt tensioner assembly, left and right	1
11	730514	730514	Washers, 13 mm ID, top shock mount, stainless steel	1
12	730520	730521	Foot rest spacer left FXD06-up	1
13	S000037	S000037	Washer 19 x 34 mm, rear axle, zinc plated	2
14	S000100	S000100	5/16-18x1.000" Hex UNC, brake anchor mount	2
15	S236493	S236493	Ring Flat 5/16"x 5/8"x 15g, brake anchor mount	2
16	S236494	S236494	Spring Ring Washer 5/16" Zinc, brake anchor mount	2
17	S239355	S239355	Chrome Allen screw, left lower shock mount, 1/2-13x2,75	1
18	S239357	S239357	Chrome Allen screw, right lower shock mount, 1/2-13x3 1/4	1
19	S720242	S720242	Chrome Nyloc nut 1/2-13, lower shock mount	2
20	S742682	S742682	Allen head bolt left footrest mount	2
21	S742786	S742786	Allen head bolt 1/2-13x2" fender strut mount	2
22	S743905	S743905	Washer 1/2" zinc, fender strut mount	2
23	S743905	S743905	Washer 1/2" zinc, lower shock mount	4
24	S743955	S743955	Lock washer 1/2" zinc	2
25			Washer, stainless steel, 25x13x5mm	2

