
700996

Kit setup on 2000-up OEM frame

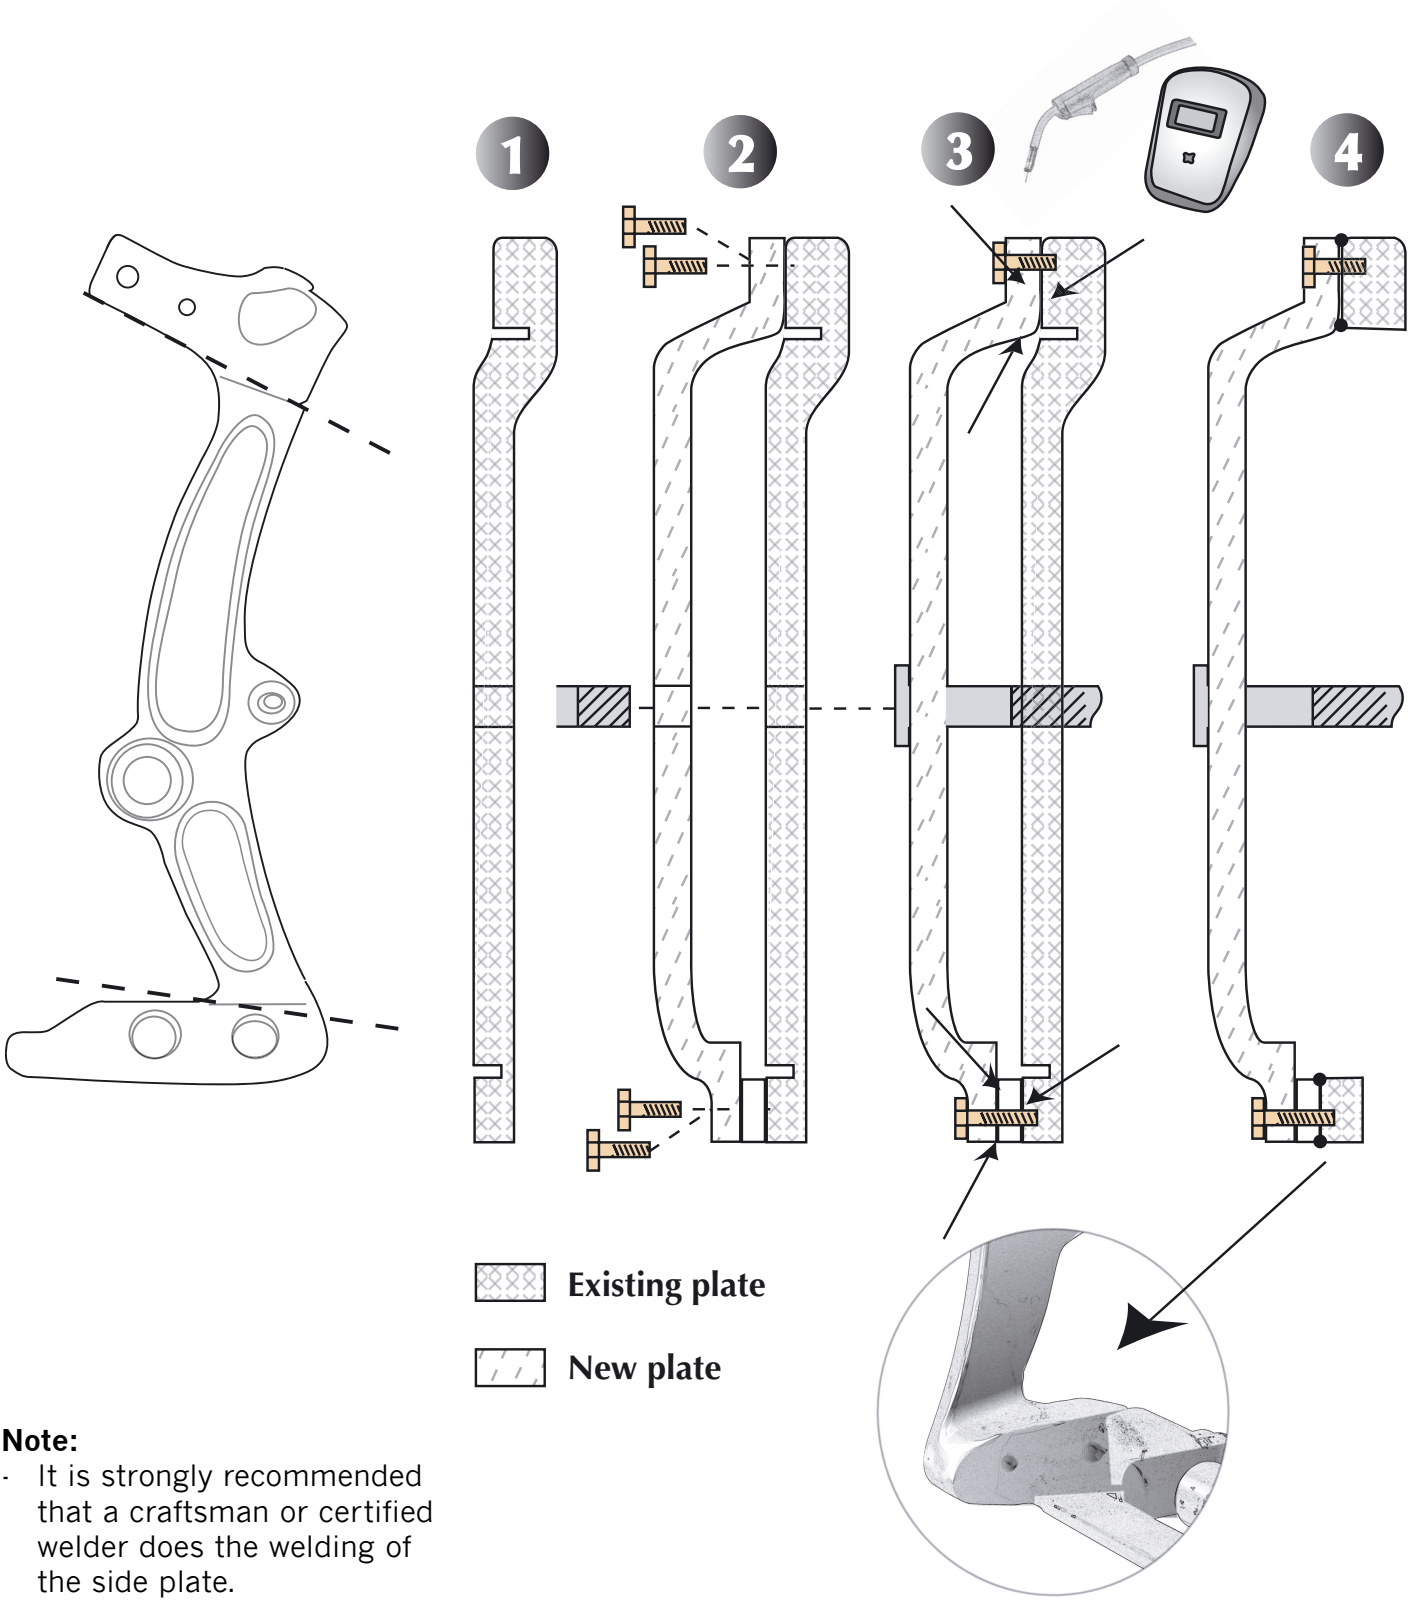

Note:

- It is strongly recommended that a craftsman or certified welder does the welding of the side plate.