


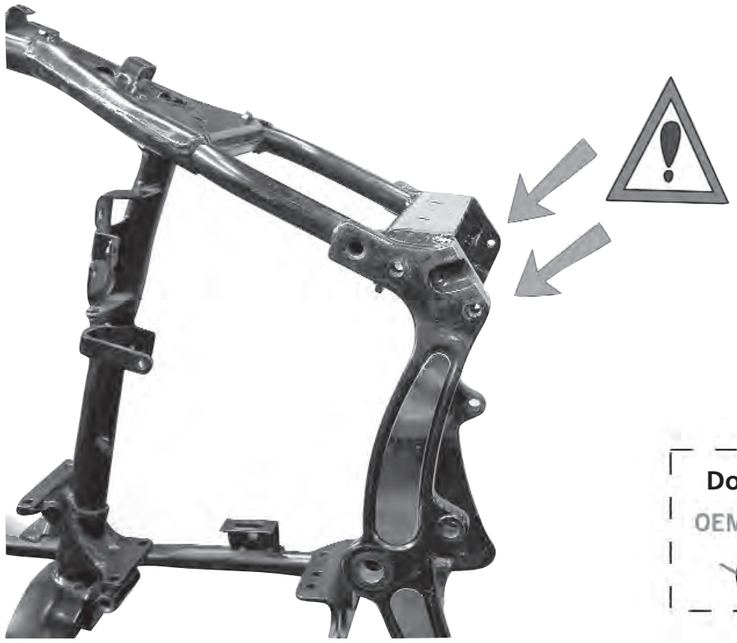


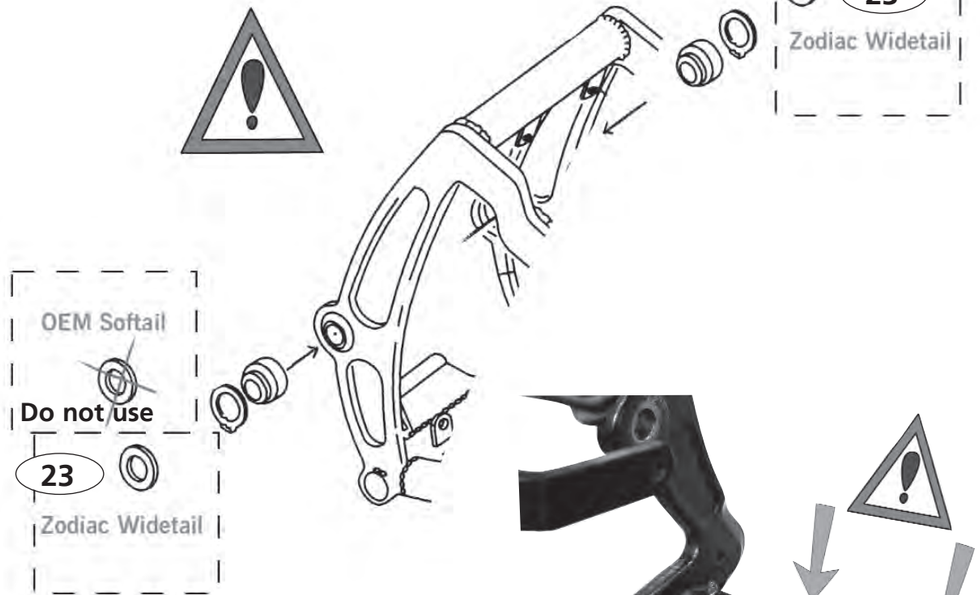

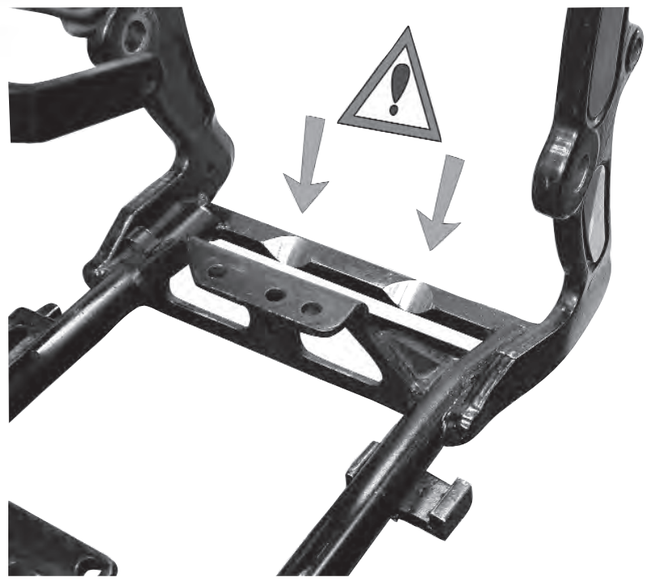

“SUPER-ASS” SWINGARM KIT FOR 1991 THRU 1999 EVOLUTION SOFTAILS

Complete “Super-Ass” kit
236443 Complete kit, fits 1991 thru 1999

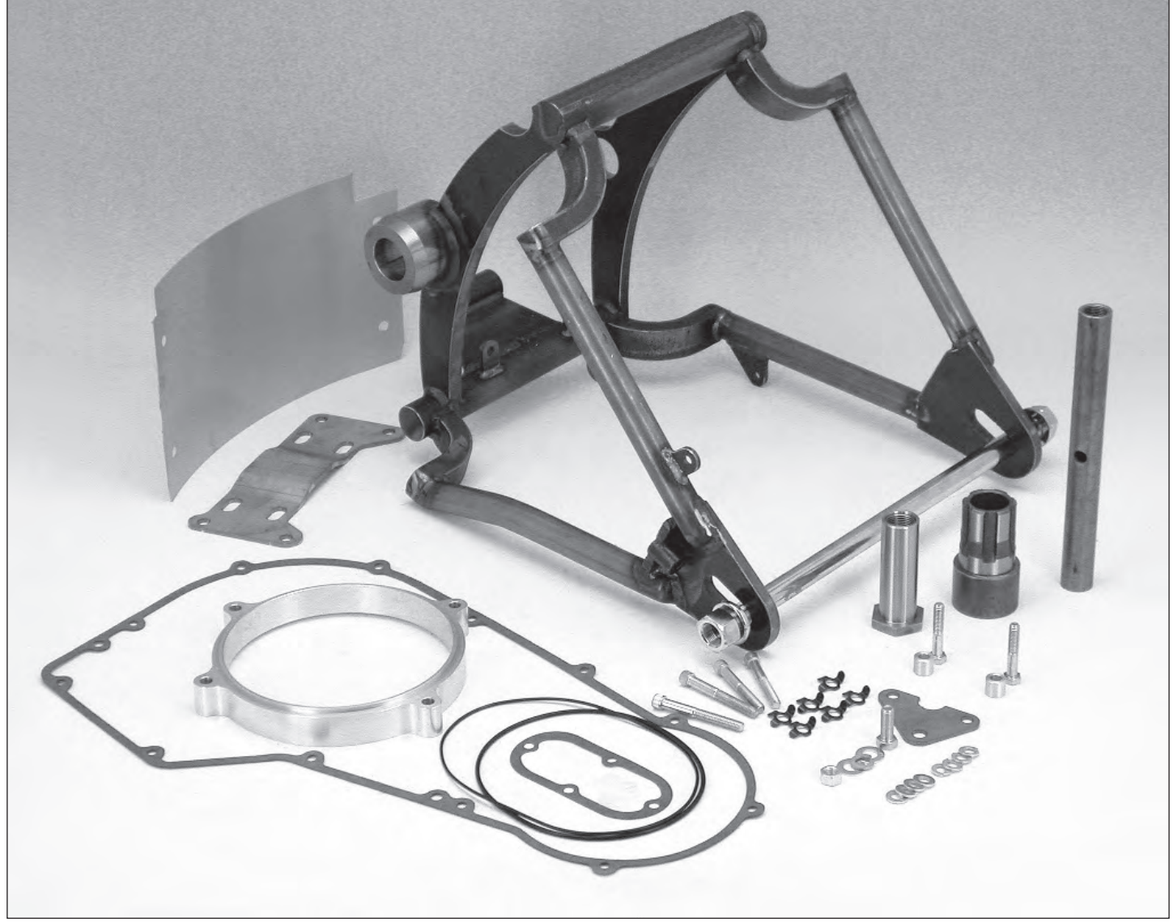

Kit can also be used for late 1987 thru 1990 models when D and E are ordered separately

Pos.	Part no	Description	Qty
1	236432	Rear axle SuperAss w/washer &	1
2	236490	Off-set Transmission plate	1
3	032554	Inner spacer ring 25mm	1
-	236687	Super-Ass swingarm Zodiac &	1
-	238763	Stainless swingarm plate	1
7	346210	25mm Extended shaft extension	1
8	346214	25mm Extended crankshaft nut #	1
9	700011	O-ring chain housing	1
10	700001	Gasket set 1987 thru 1999 models	1
11	292216	Inner primary lock tab	6
12		Spring Washer 3/8"	1
13		Washer 3/8"	2
14		Bolt 5/16UNCx1-3/4" (for OEM frames)	2
14		Bolt 5/16UNCx2-1/4" (for Zodiac Widetail frames)	2
15		Hex head bolt UNF 3/8x1 zinc	1
16		UNF nut 3/8 zinc plated	1
17		Allen Bolt 5/16UNC x2-1/4"	2
18		Ring Flat 5/16"x 5/8"	4
19		Spring Washer 5/16"	4
20		Allen Bolt 5/16UNC x2-1/2"	2
21		Transmission spacer (2 for OEM, 4 for Widetail)	4
22	S720429	Transmission support plate	1
23	S000037	Washer	2
A		Drill 3/8" hole	
B	735006	Wheel spacer 1/2"	NOT included
	735007	Wheel spacer 3/4"	NOT included
	735008	Wheel spacer 1"	NOT included
	735009	Wheel spacer 1 3/4"	NOT included
C	346212	Crankshaft nut for 1984 thru 1990 models	NOT included
D	700362	Gasket kit for 1984 thru 1986	NOT included

Note: Spacers for pulley, brake and axle are not included.

